

SCHEMA ELETTRICO - WIRING DIAGRAM - SCHEMA ELECTRIQUE - SCHEMA ELECTRICO

14.12.00

The diagram illustrates the electrical system for the 14.12.00 engine. It includes the following components and connections:

- Injectors:** Original connectors (Connettori originali / Original connector / Connecteurs d'origine / Conexiones originales) are connected to the injectors (Iniettori / Petrol injectors / Injecteurs / Inyectores).
- Fuel Pump:** The fuel pump (Pompa benzina / Gasoline pump / Pompe essence / Bomba gasolina) is connected to the injectors.
- Coil:** The coil (Bobina / Coil / Bobine d'allumage / Bobina) is connected to the injectors.
- Electrovalve:** The electrovalve (Elettrovalvole gas / Gas solenoid valves / Electrovanne gaz / Electrovalvulas gas) is connected to the fuel pump.
- Massa:** The massa (Massa / Ground / Masse / Masa) is connected to the engine block.
- Sensors:** The diagram shows connections for various sensors, including the lambda probe (Sonda lambda / Oxygen sensor / Sonde lambda / Sonda lambda), the methanol sensor (Sensore metano o sensore GPL / To CNG or LPG sensor / Jauge méthaneou / Jauge GPL / Al sensor para NGV o al sensor para GLP), and the T.P.S. (T.P.S.).
- Wiring Colors:** The diagram uses various wire colors to identify different circuits, including Yellow (Giallo / Yellow / Jaune / Amarillo), Blue (Blu / Blue / Bleu / Azul), White (Bianco / White / Blanc / Blanco), Green (Verde / Green / Vert / Verde), Blue-Yellow (Blu-Giallo / Blue-Yellow / Bleu-Jaune / Azul-Amarillo), Brown (Marrone / Brown / Marron / Marrón), Grey (Grigio / Grey / Gris / Gris), Violet (Viola / Violet / Violet / Violeta), Red (Rosso / Red / Rouge / Rojo), and Black (Nero / Black / Noir / Negro).
- Fuses:** The diagram includes a 5A fuse (Fusibile max 5A / Fuse, 5A max / Fusible max 5A / Fusible max 5A) for the 12V accessories (12V sotto chiave / 12V accessories / 12V apres contact / 12V bajo llave).
- Battery:** The battery (Massa batteria / Battery negative pole / Pôle negatif de la batterie / Polo negativo de la bateria) is connected to the engine block.

Landi S.r.l., si riserva di modificare la presente scheda senza alcun preavviso, al fine di migliorare il funzionamento della vettura.	Landi S.r.l. reserves the right to modify this specification sheet without previous notice in order to improve the vehicle performances.	Landi S.r.l. se réserve le droit de modifier le présent schéma, sans aucun préavis, afin d'améliorer le bon fonctionnement du véhicule.	Landi S.r.l. se reserva el derecho de modificar esta ficha técnica sin previo aviso al final de mejorar el funcionamiento del vehículo.
--	--	---	---